



The old style cap and metering valve



The new style cap and metering valve



Remove the cap and metering valve assembly from the fuel cell



Separate the cap from the metering Valve



Discard the cap / For shipping purposes only